
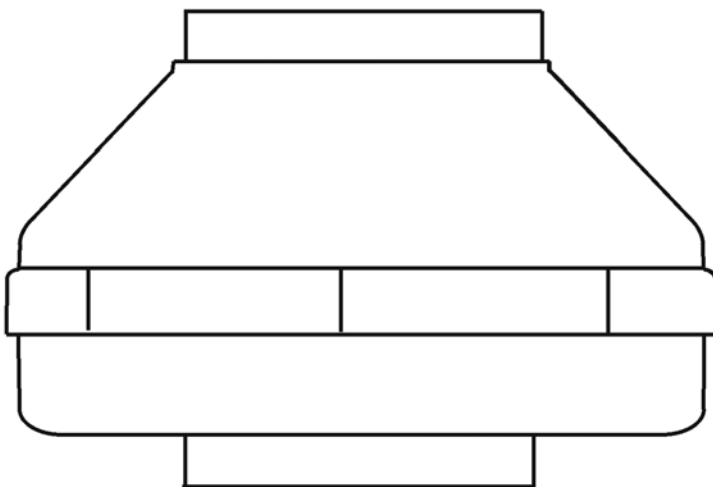
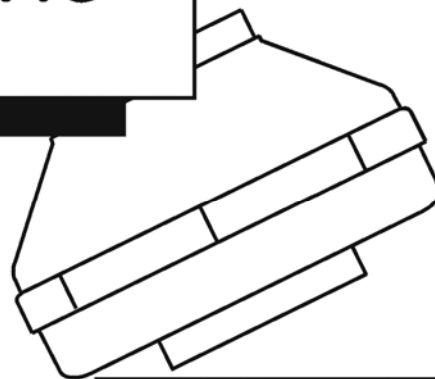


DynaVent RB Series Installation Instructions

By

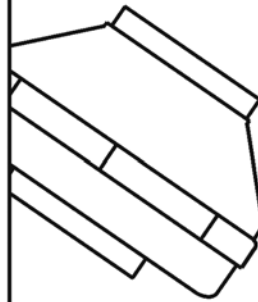

RB110
RB275
RB300
RB400
RB500

Spruce Environmental Technologies, Inc.
Ward Hill, MA P/N IN018 Rev G




Please Read And Save These Instructions.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:


- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- d) Ducted fans must always be vented to the outdoors.
- e) If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) - protected branch circuit.
- f) NEVER place a switch where it can be reached from a tub or shower.
- g) Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- h) Before servicing or cleaning unit, switch power off at service panel and lock the service connecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- i) Fan is suitable for use with solid-state speed controls.

CAUTION: For General Ventilating Use Only. Do Not Use To Exhaust Hazardous Or Explosive Materials And Vapors.

DynaVent DB100 Wiring Diagram

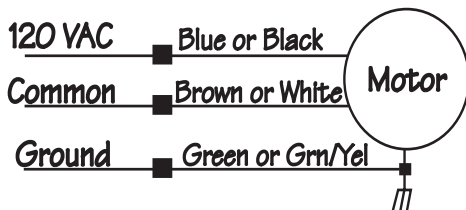

DynaVent RB Series Wiring Diagram

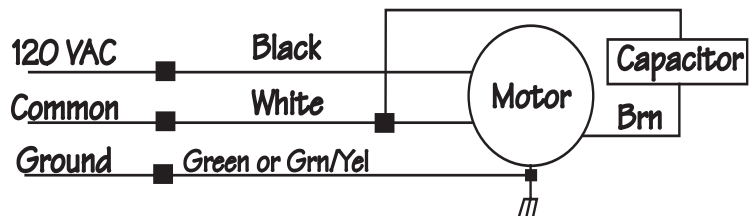



INSTALLATION INSTRUCTIONS IN018 Rev G

DynaVent - RB Series	
RB110	p/n 23046-1, 28128
RB275	p/n 23034-1, 28115
RB300	p/n 23022-1, 28088
RB400	p/n 23024-1, 28091
RB500	p/n 23026-1, 28092

1.0 Mounting

The DynaVent RB Series fans may be mounted at any angle without affecting performance although the vertical mounting position shown in Fig. 1 is **highly recommended**. If the vertical mounting position is not possible, care should be taken to avoid creating a low spot in the fan/duct system where condensation might accumulate in the fan housing as shown in Fig. 2. In situations where horizontal mounting is desired and condensation is likely to occur (bathroom ventilation in cold climates) this problem might be avoided by mounting the fan 30 degrees beyond horizontal as shown in Fig. 3.

Fig. 1

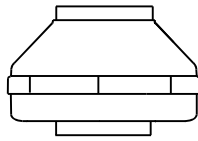


Fig. 2


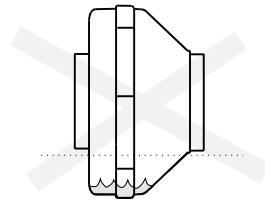


Fig. 3

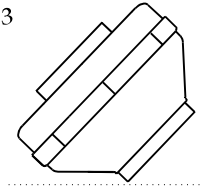

2.0 Ducting

Any type of ducting is acceptable, however, flexible nonmetallic ducting is recommended for easy installation and quieter operation. Insulated flexible ducting is **highly recommended** in cold climates to prevent the warm bathroom air from forming condensation in the ducting where it is exposed to colder attic air. The outlet of the fan should always be ducted to the outside. Avoid venting the outlet of the fan directly into an attic area. The excess moisture from the bathroom can cause damage to building structure and any items stored in the attic. Multiple venting points may be connected together using a "T" or "Y" fitting. Straight smooth runs of ducting will present the least resistance and maximize system performance.

For quietest performance, the fan should be mounted further away from the inlet duct, near the outside vent. A minimum distance of 10 feet is recommended between the fan or T/Y of a multi-intake system and intake grille(s).

3.0 Backdraft Dampers

Backdraft dampers allow airflow in only one direction preventing cold/hot drafts from entering the vented area and minimize possible condensation and icing within the system while the fan is not operating. Backdraft dampers are **highly recommended** at each intake grille for bathroom ventilation in all cold climate installations.

4.0 Electrical Wiring

Electrical connection to the fan should be performed by a qualified person in accordance with all local, state and national electrical codes. A Ground Fault Interrupter (GFI) circuit is not required in most installations, check your local codes.

5.0 Applications


Suitable for general ventilation, bathroom venting, fresh air supply, duct boosting, building pressurization, etc.

The RB110 is suitable for dryer boosting.

Not suitable for kitchen range hood venting.

6.0 Installation


Step 1: Install Mounting Bracket as shown. Attach the fan to the mounting bracket with (2) #10 self-tapping screws, provided. Avoid over tightening screws.

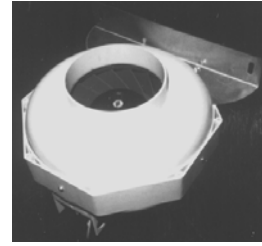


Step 2: Select location for fan mounting. A location 2/3 along the ducting, a minimum of 10 feet away from the inlet vent to the fan or the Y/T of a multi-intake system will provide the quietest operation. Fan should be mounted vertically to prevent moisture from accumulating in the fan housing. Attach bracket to mounting structure with the 1 1/4" screws provided.



Step 3: Connect ductwork between fan inlet and area to be vented through inlet grille. Flexible, nonmetallic ducting is recommended for quietest operation and easiest installation. Insulated flexible ducting is **highly recommended** for bathroom ventilation in all cold climate installations.

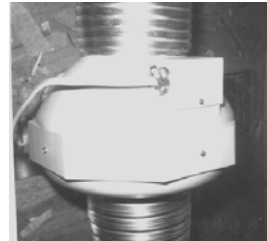

Step 4: Connect inlet grille(s). An optional backdraft damper may be installed in the inlet grille to prevent cold air from backing into the inlet and also prevent condensation from forming inside the ductwork. Backdraft dampers are **highly recommended** at each intake grille for bathroom ventilation in all cold climate installations.

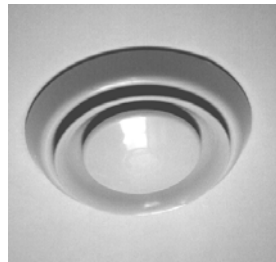

Step 5: Connect outlet of fan to outside vent. The outside vent may go through the roof, sidewall or soffit as desired. Flexible, nonmetallic ducting is recommended for quietest operation and easiest installation. Insulated flexible ducting is **highly recommended** for bathroom ventilation in all cold climate installations.



Step 6: Make electrical connection to fan. Insure any metal fitting used in the installation is properly grounded. A plastic cable connector such as a T&B #3300 may be used to avoid any fitting grounding problem. Observe the proper wiring connections:



RB Series Wire	AC Connection
Black	AC Line
White	AC Common
Green or Grn/Yel	Ground

RB SERIES PRODUCT SPECIFICATIONS

The following chart shows fan performance for RB Series Commercial/Residential Fans:

Typical CFM Vs Static Pressure "WC

	0"	.2"	.5"	.75"	1.0"	1.25"	1.5"	1.75"	2.0"
RB110	127	100	71	20	-				
RB275	284	230	182	143	107	60	14		
RB300A	320	270	212	172	135	90	30		
RB400	510	470	390	315	269	218	165	100	55
RB500	498	460	385	319	254	197	136	82	40

Power Consumption @ 120 VAC , 60Hz (2.0 Amp Maximum)

RB110	14 - 19	watts
RB275	52 - 73	watts
RB300A	66 - 87	watts
RB400	103 - 156	watts
RB500	103 - 156	watts

Size:

Fan Model	"A" Dim	"B" Dim	"C" Dim	Duct Size	Weight
RB110	9.7"	3.9"	8.5"	4"	5 lbs
RB275	11.8"	5.9"	8.6"	6"	5.5 lbs
RB300A	13.4"	5.9"	9"	6"	8 lbs
RB400	13.4"	7.9"	9"	8"	9 lbs
RB500	13.4"	9.9"	9"	10"	9 lbs

Mounting: Mounting bracket included.

Recommended ducting: 4", 6", 8" or 10" Flexible Ducting.

Storage temperature range: 32 - 100 degrees F.

Normal operating temperature range: -20 - 120 degrees F.

Maximum inlet air temperature: 140 degrees F continuous.

Continuous Duty **3000 RPM**



Thermally protected **Class F Insulation**

Rated for Indoor use only

Rated for Residential and Commercial use

Suitable for use with solid-state speed controls

Suitable for use over tub or shower

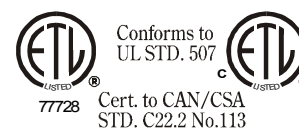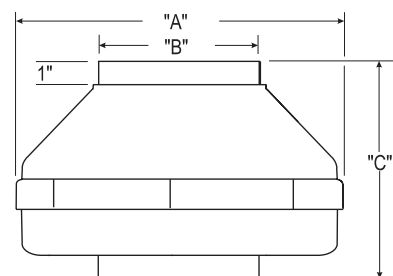

Typical RB Series Fan Installation

- 1 RB Series Fans
 - RB110 - P/N 28086
 - RB275 - P/N 28128
 - RB300 - P/N 28088
 - RB400 - P/N 28206
 - RB500 - P/N 28207

Mounting Bracket included

- 2 Flexible Duct

Insulated Ducting is strongly recommended in colder climates

- 3A Roof Vent Cap


or
- 3B Vent Hood

- 4 Y or T for Optional Second Vent

- 5 Vent Details

Deluxe Metal Backdraft Damper Duct Grille & Collar

Backdraft Dampers are strongly recommended in colder climates.

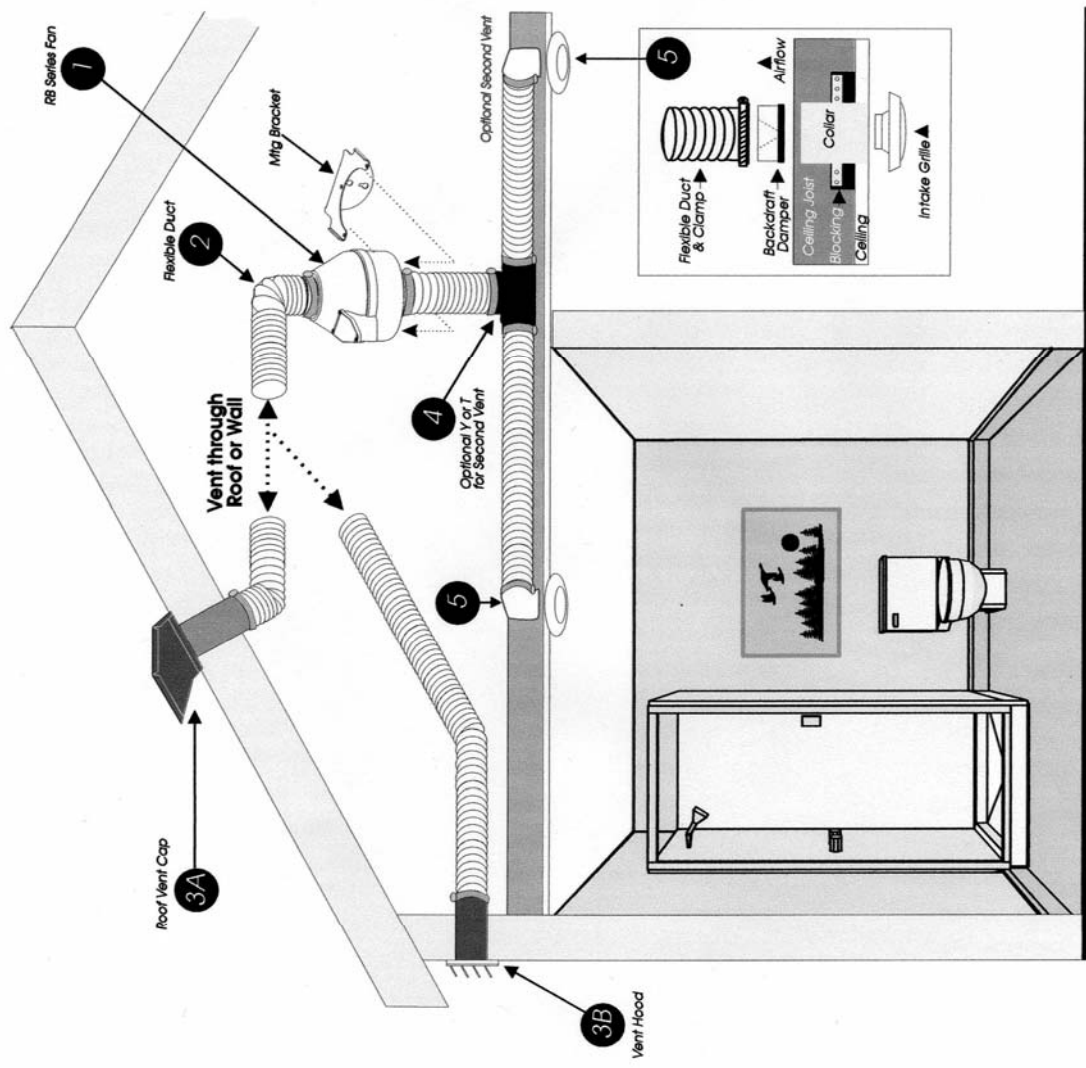

IMPORTANT INSTRUCTIONS TO INSTALLER

Inspect the RB Series Fan for shipping damage within 15 days of receipt. Notify Spruce of any damages immediately. Spruce is not responsible for damages incurred during shipping. However, for your benefit, Spruce does insure shipments.

There are no user serviceable parts inside the fan. **Do not attempt to open.** Return unit to factory for service.

Install the RB Series Fan in accordance with all state and local building codes and state regulations.

WARRANTY

Subject to any applicable consumer protection legislation, Spruce Environmental Technologies, Inc. ("Spruce") warrants that the RV/RB/DB/RL Series Fan (the "Fan") will be free from defects in materials and workmanship for a period of five (5) years from the date of manufacture (the "Warranty Term").

Warranty claims made during the first thirty days after installation:

Spruce will replace any Fan which fails due to defects in materials or workmanship. The Fan may be returned (at owner's cost) to either the point of purchase or the Spruce factory. The point of purchase may require proof of purchase or a bill of sales for replacement.

Warranty claims made after the first thirty days after installation through the end of the Warranty Term:

Spruce will (at its option) either recondition or replace any Fan which fails due to defects in materials or workmanship. The Fan must be returned (at owner's cost) to the Spruce factory.

This Warranty is contingent on installation of the Fan in accordance with the instructions provided. This Warranty does not apply where any repairs or alterations have been made or attempted by others, or if the unit has been abused or misused. Warranty does not include damage in shipment unless the damage is due to the negligence of Spruce.

Spruce is not responsible for installation, removal or delivery costs associated with this Warranty.

EXCEPT AS STATED ABOVE, THE RV/RB/DB/RL SERIES FANS ARE PROVIDED WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL SPRUCE BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF, OR RELATING TO, THE FAN OR THE PERFORMANCE THEREOF. SPRUCE'S AGGREGATE LIABILITY HEREUNDER SHALL NOT IN ANY EVENT EXCEED THE AMOUNT OF THE PURCHASE PRICE OF SAID PRODUCT. THE SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE THE REPAIR OR REPLACEMENT OF THE PRODUCT, TO THE EXTENT THE SAME DOES NOT MEET WITH SPRUCE'S WARRANTY AS PROVIDED ABOVE.

For service under this Warranty, contact Spruce for a Return Material Authorization (RMA) number and shipping information. No returns can be accepted without an RMA. If factory return is required, the customer assumes all shipping cost to and from factory.

Spruce Environmental Technologies, Inc.
3 Saber Way
Ward Hill, MA 01835
TEL. (978) 355-0901
FAX (978) 521-3964

Record the following information for your records:

Serial No. _____
Purchase Date _____